

Laser Rangefinder Data Directions

Setup:

Setup Laser/compass
Connect cable from compass to serial port (COM1) on Laptop

Data Collection:

Start Hyperterminal via Laserfinder.ht shortcut on the Desktop.

Connection should be setup: COM1, 4800 Baud, Parity - None, Start bit – 1, Flow Control – None

Start Capturing Data:

Transfer -> Capture Text ... -> Pick filename/location to save output data.

Fire Laser rangefinder. Compass and Laser must both be on for data to be sent.

When Finished with Laser:

Transfer -> Capture Text -> Stop

*****NOTE*****

Be sure to stop capture before quitting HyperTerminal. File may not save correctly if you don't.
